

How to Use Your Eyelet Setter

In addition to your eyelet setter, you will need a **mallet** and a small, very sharp **fabric awl**.




1. Assemble buttons with eyelet backs, eyelet shells, and fabric.




2. Use a fabric awl to poke through **back** to mark placement, then through **front** to form a pilot hole.



3. Place eyelet loosely on awl to facilitate insertion.

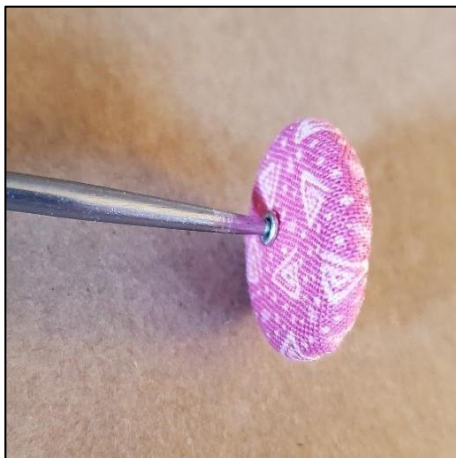

4. Push eyelets through holes and remove awl, leaving eyelets in place.

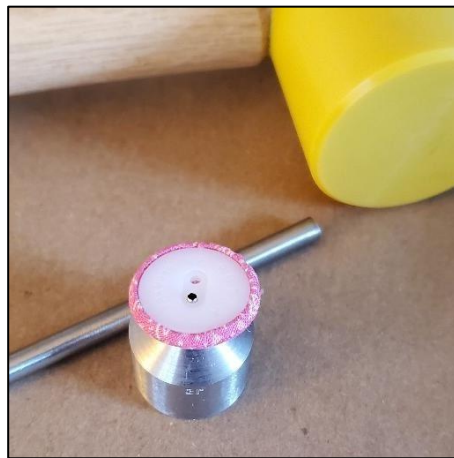

5. **Place anvil on work-safe surface.** Flip button upside-down on anvil with pin through eyelet. Fit shaped end of tool into eyelet.



6. Whack tool gently with mallet a few times –you might need to experiment with pressure. Repeat process until all eyelets are set.